# 1880148
# Fold Out Vanity AW

## Parts List

| | | |
|---|---|---|
| A. | Top Assembly | 1 pc |
| B. | Spindles | 4 pcs |
| C. | Feet | 4 pcs |
| D. | Left Stretcher | 1 pc |
| E. | Right Stretcher | 1 pc |
| F. | Back Stretcher | 1 pc |

* Please make sure that you have all the parts indicated above before you begin assembly of this item.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* This item is to be assembled by an adult and is not intended to be taken apart by a child.

## Assembly Instructions

1. **Attach Spindles (B)** Put Top Assembly (A) upside down on a soft surface. Align the exposed threads of the Spindles (B) with the pre-threaded holes in the blocks of Top Assembly (A). Tighten by turning in a clockwise direction. See illustration.
2. **Attach Left & Right Stretchers (E,F)** Align pre-drilled holes in the Left & Right Stretchers (D, E) with the pre-threaded holes in the front and back of Spindles (B). Make sure the end of Left & Right Stretchers (D, E) with pre-cut groove is on the back of the Spindles (B) and facing up. Insert the exposed threads of Feet (C) through the pre-drilled holes in the Left & Right Stretchers (D, E) into the pre-threaded holes in the front Spindles (B). Secure, but do not fully tighten, by turning in a clockwise direction. See illustration.
3. **Attach Back Stretcher (F)** Align the pre-drilled holes in Back Stretcher (F) with the pre-drilled holes in the Left & Right Stretcher (D, E). Make sure the side with pre-cut out part of the Back Stretcher (F) is face down. Insert the exposed threads of Feet (C) through the pre-drilled holes in the Back Stretcher (F) into the pre-threaded holes in the Back Spindles (B). Secure, but do not fully tighten by turning in a clockwise direction. See illustration.
4. **Adjust and tighten all feet at this time.**



R1-4-15-04

**1880148**
**Fold Out Vanity AW**

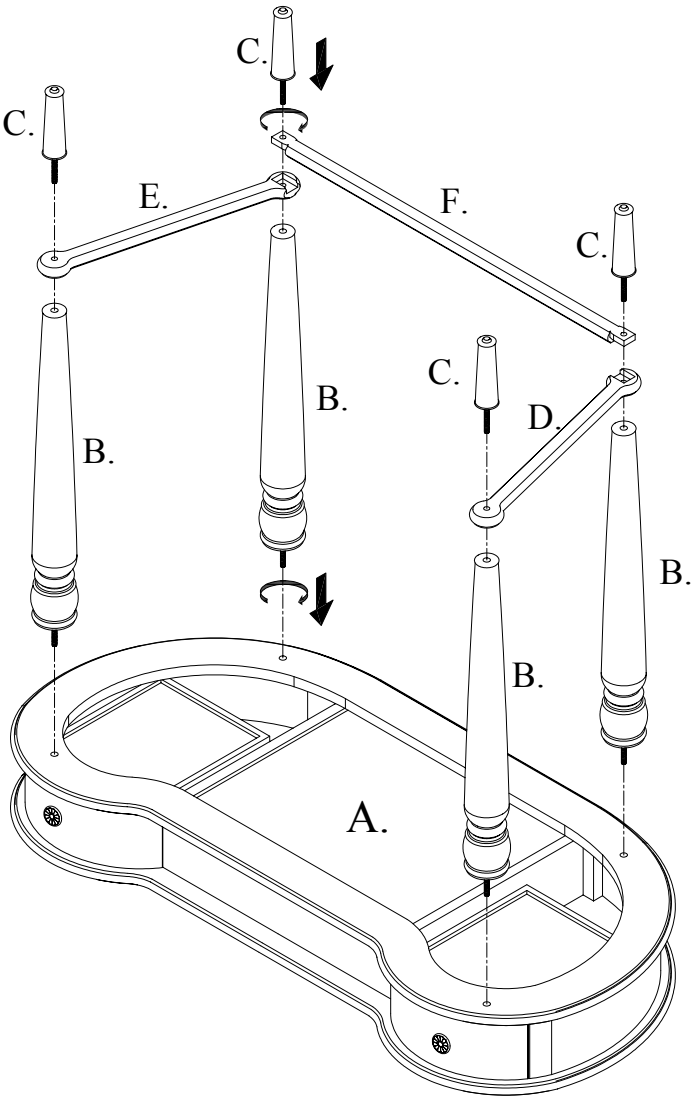




R1-4-15-04